

Mobile filtration unit 180 l/min flow rate





(49)

Introduction



Contamination management

INDEX

	Page
1 HYDRAULIC FLUIDS	12
2 FLUIDS CONTAMINATION	12
3 EFFECTS OF CONTAMINATION ON HYDRAULIC COMPO	NENTS 12
(4) MEASURING THE SOLID CONTAMINATION LEVEL	13
5 RECOMMENDED CONTAMINATION CLASSES	16
6 WATER IN HYDRAULIC AND LUBRICATING FLUIDS	17



1 HYDRAULIC FLUIDS

The fluid is the vector that transmits power, energy within an oleodynamic circuit. In addition to transmitting energy through the circuit, it also performs additional functions such as lubrication, protection and cooling of the surfaces. The classification of fluids used in hydraulic systems is coded in many regulatory references, different Standards.

The most popular classification criterion divides them into the following families: - MINERAL OILS

Commonly used oil deriving fluids.

- FIRE RESISTANT FLUIDS Fluids with intrinsic characteristics of incombustibility or high flash point.
- SYNTHETIC FLUIDS Modified chemical products to obtain specific optimized features.
- ECOLOGICAL FLUIDS

Synthetic or vegetable origin fluids with high biodegradability characteristics.

The choice of fluid for an hydraulic system must take into account several parameters.

These parameters can adversely affect the performance of an hydraulic system, causing delay in the controls, pump cavitation, excessive absorption, excessive temperature rise, efficiency reduction, increased drainage, wear, jam/block or air intake in the plant.

The main properties that characterize hydraulic fluids and affect their choice are:

- DYNAMIC VISCOSITY
- It identifies the fluid's resistance to sliding due to the impact of the particles forming it.
- KINEMATIC VISCOSITY

It is a widespread formal dimension in the hydraulic field.

It is calculated with the ratio between the dynamic viscosity and the fluid density.

Kinematic viscosity varies with temperature and pressure variations.

- VISCOSITY INDEX

This value expresses the ability of a fluid to maintain viscosity when the temperature changes.

A high viscosity index indicates the fluid's ability to limit viscosity variations by varying the temperature.

- FILTERABILITY INDEX

It is the value that indicates the ability of a fluid to cross the filter materials. A low filterability index could cause premature clogging of the filter material.

- WORKING TEMPERATURE

Working temperature affects the fundamental characteristics of the fluid. As already seen, some fluid characteristics, such as cinematic viscosity, vary with the temperature variation.

When choosing a hydraulic oil, must therefore be taken into account of the environmental conditions in which the machine will operate.

- COMPRESSIBILITY MODULE

Every fluid subjected to a pressure contracts, increasing its density. The compressibility module identifies the increase in pressure required to cause a corresponding increase in density.

- HYDROLYTIC STABILITY

It is the characteristic that prevents galvanic pairs that can cause wear in the plant/system.

12

- ANTIOXIDANT STABILITY AND WEAR PROTECTION These features translate into the capacity of a hydraulic oil to avoid corrosion of metal elements inside the system.
- HEAT TRANSFER CAPACITY
 It is the characteristic that indicates the capacity of hydraulic oil to exchange heat with the surfaces and then cool them.

2 FLUID CONTAMINATION

Whatever the nature and properties of fluids, they are inevitably subject to contamination. Fluid contamination can have two origins:

- INITIAL CONTAMINATION

Caused by the introduction of contaminated fluid into the circuit, or by incorrect storage, transport or transfer operations.

- PROGRESSIVE CONTAMINATION

Caused by factors related to the operation of the system, such as metal surface wear, sealing wear, oxidation or degradation of the fluid, the introduction of contaminants during maintenance, corrosion due to chemical or electrochemical action between fluid and components, cavitation. The contamination of hydraulic systems can be of different nature:

- SOLID CONTAMINATION

For example rust, slag, metal particles, fibers, rubber particles, paint particles - or additives

- LIQUID CONTAMINATION


For example, the presence of water due to condensation or external infiltration or acids

- GASEOUS CONTAMINATION

For example, the presence of air due to inadequate oil level in the tank, drainage in suction ducts, incorrect sizing of tubes or tanks.

3 EFFECTS OF CONTAMINATION ON HYDRAULIC COMPONENTS

Solid contamination is recognized as the main cause of malfunction, failure and early degradation in hydraulic systems. It is impossible to delete it completely, but it can be effectively controlled by appropriate devices.

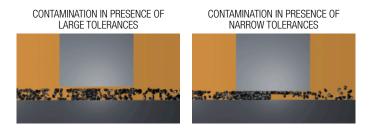

Solid contamination mainly causes surface damage and component wear.

(())) MPALTRI

- SURFACE EROSION

Cause of leakage through mechanical seals, reduction of system performance, variation in adjustment of control components, failures.

- ADHESION OF MOVING PARTS Cause of failure due to lack of lubrication.
- DAMAGES DUE TO FATIGUE Cause of breakdowns and components breakdown.





Liquid contamination mainly results in decay of lubrication performance and protection of fluid surfaces.

DISSOLVED WATER

- INCREASING FLUID ACIDITY Cause of surface corrosion and premature fluid oxidation
- GALVANIC COUPLE AT HIGH TEMPERATURES Cause of corrosion

FREE WATER - ADDITIONAL EFFECTS

- DECAY OF LUBRICANT PERFORMANCE Cause of rust and sludge formation, metal corrosion and increased solid contamination
- BATTERY COLONY CREATION Cause of worsening in the filterability feature
- ICE CREATION AT LOW TEMPERATURES Cause damage to the surface
- ADDITIVE DEPLETION Free water retains polar additives

Gaseous contamination mainly results in decay of system performance.

- CUSHION SUSPENSION Cause of increased noise and cavitation.
- FLUID OXIDATION Cause of corrosion acceleration of metal parts.

- MODIFICATION OF FLUID PROPERTIES (COMPRESSIBILITY MODULE, DENSITY, VISCOSITY) Cause of system's reduction of efficiency and of control. It is easy to understand how a system without proper contamination management is subject to higher costs than a system that is provided.
- MAINTENANCE Maintenance activities, spare parts, machine stop costs
- ENERGY AND EFFICIENCY Efficiency and performance reduction due to friction, drainage, cavitation.

(4) MEASURING THE SOLID CONTAMINATION LEVEL


The level of contamination of a system identifies the amount of contaminant contained in a fluid.


This parameter refers to a unit volume of fluid.

The level of contamination may be different at different points in the system. From the information in the previous paragraphs it is also apparent that the level of contamination is heavily influenced by the working conditions of the system, by its working years and by the environmental conditions.

What is the size of the contaminating particles that we must handle in our hydraulic circuit?







HUMAN HAIR (75 µm)

MINIMUM DIMENSION VISIBLE WITH HUMAN EYES (40 µm)

TYPICAL CONTAMINANT DIMENSION IN A HYDRAULIC CIRCUIT (4-14 um)

Contamination level analysis is significant only if performed with a uniform and repeatable method, conducted with standard test methods and suitably calibrated equipment.

To this end, ISO has issued a set of standards that allow tests to be conducted and express the measured values in the following ways.

- GRAVIMETRIC LEVEL - ISO 4405

The level of contamination is defined by checking the weight of particles collected by a laboratory membrane. The membrane must be cleaned, dried and desiccated, with fluid and conditions defined by the Standard.

The volume of fluid is filtered through the membrane by using a suitable suction system. The weight of the contaminant is determined by checking the weight of the membrane before and after the fluid filtration.



MEMBRANE



CONTAMINATED MEMBRANE

13

- CUMULATIVE DISTRIBUTION OF THE PARTICLES SIZE - ISO 4406

The level of contamination is defined by counting the number of particles of certain dimensions per unit of volume of fluid. Measurement is performed by Automatic Particle Counters (APC).

Following the count, the contamination classes are determined, corresponding to the number of particles detected in the unit of fluid.

The most common classification methods follow ISO 4406 and SAE AS 4059 (Aerospace Sector) regulations.

NAS 1638 is still used although obsolete.

Classification example according to ISO 4406

The International Standards Organisation standard ISO 4406 is the preferred method of quoting the number of solid contaminant particles in a sample.

The code is constructed from the combination of three scale numbers selected from the following table.

The first number represents the number of particles that are larger than 4 $\mu m_{\text{(c)}}$

The second number represents the number of particles larger than 6 μ m_(c). The third scale number represents the number of particles in a millilitre sample of the fluid that are larger than 14 μ m_(c).

ISO 4406 - Allocation of Scale Numbers

Class	Number of particles per ml			
	Over	Up to		
28	1 300 000	2 500 000		
27	640 000	1 300 000		
26	320 000	640 000		
25	160 000	320 000		
24	80 000	160 000		
23	40 000	80 000		
22	20 000	40 000		
21	10 000	20 000		
20	5 000	10 000		
19	2 500	5 000		
18	1 300	2 500		
17	640	1 300		
16	320	640		
15	160	320		
14	80	160		
13	40	80		
12	20	40		
11	10	20		
10	5	10		
9	2.5	5		
8	1.3	2.5		
7	0.64	1.3		
6	0.32	0.64		
5	0.16	0.32		
4	0.08	0.16		
3	0.04	0.08		
2	0.02	0.04		
1	0.01	0.02		
0	0	0.01		


$>$ 4 μ m _(c) = 350 particles
$> 6 \mu m_{(c)} = 100 \text{ particles}$
$> 14 \mu m_{(c)} = 25 \text{particles}$
16/14/12

14

ISO 4406 Cleanliness Code System

Microscope counting examines the particles differently to APCs and the code is given with two scale numbers only.

These are at 5 μ m and 15 μ m equivalent to the 6 μ m_(c) and 14 μ m_(c) of APCs.

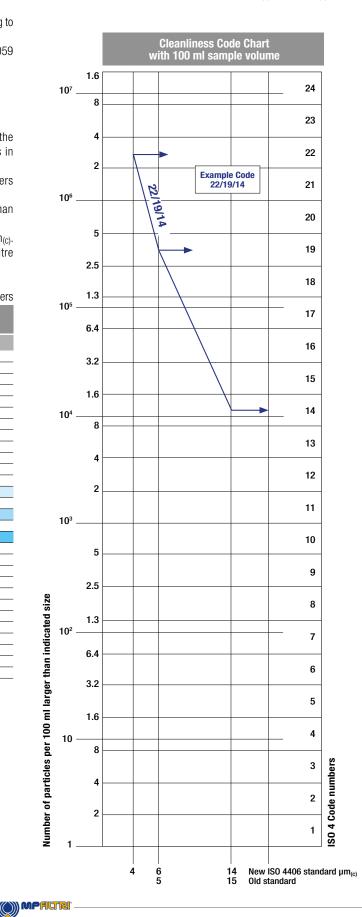

- CUMULATIVE DISTRIBUTION OF THE PARTICLES SIZE - SAE AS 4059-1 and SAE AS 4059-2

Classification example according to

SAE AS4059 - Rev. E and SAE AS4059-2 - Rev. F

The code, prepared for the aerospace industry, is based on the size, quantity, and particle spacing in a 100 ml fluid sample. The contamination classes are defined by numeric codes, the size of the contaminant is identified by letters (A-F).

SAE AS4059 - REV. E

It can be made a differential measurement (Table 1) or a cumulative measurement (Table 2)

Table 1 - Class for differential measurement

Class	Dimension of contaminant Maximum Contamination Limits per 100 ml						
	6-14 μm _(c)	14-21 µm _(c)	21-38 µm _(c)	38-70 µm _(c)	>70 µm _(c)		
00	125	22	4	1	0		
0	250	44	8	2	0		
1	500	89	16	3	1		
2	1 000	178	32	6	1		
3	2 000	356	63	11	2		
4	4 000	712	126	22	4		
5	8 000	1 425	253	45	8		
6	16 000	2 850	506	90	16		
7	32 000	5 700	1 012	180	32		
8	64 000	11 400	2 025	360	64		
9	128 000	22 800	4 050	720	128		
10	256 000	45 600	8 100	1 440	256		
11	512 000	91 200	16 200	2 880	512		
12	1 024 000	182 400	32 400	5 760	1 024		

6 - 14 µm _(c)	=	15 000 particles
14 - 21 µm _(c)	=	2 200 particles
21 - 38 µm _(c)	=	200 particles
38 - 70 μm _(c)	=	35 particles
> 70 µm _(c)	=	3 particles
SAE AS4059	RE\	/ E - Class 6

Table 2 - Class for cumulative measurement

Class			mension of				
oluoo		Maximum Contamination Limits per 100 ml					
	>4 µm _(c)	>6 µm _(c)	$>14 \ \mu m_{(c)}$	$>21 \ \mu m_{(c)}$	>38 µm _(c)	$>70 \ \mu m_{(c)}$	
000	195	76	14	3	1	0	
00	390	152	27	5	1	0	
0	780	304	54	10	2	0	
1	1 560	609	109	20	4	1	
2	3 120	1 217	217	39	7	1	
3	6 250	2 432	432	76	13	2	
4	12 500	4 864	864	152	26	4	
5	25 000	9 731	1 731	306	53	8	
6	50 000	19 462	3 462	612	106	16	
7	100 000	38 924	6 924	1 224	212	32	
8	200 000	77 849	13 849	2 449	424	64	
9	400 000	155 698	27 698	4 898	848	128	
10	800 000	311 396	55 396	9 796	1 696	256	
11	1 600 000	622 792	110 792	19 592	3 392	512	
12	3 200 000	1 245 584	221 584	39 184	6 784	1 024	

>	$4 \mu m_{(c)} = 45000 \text{particles}$
>	$6 \mu m_{(c)} = 15000 \text{particles}$
_	
>	$14 \mu m_{(c)} = 1500 \text{particles}$
_	01 050 111
>	$21 \mu m_{(c)} = 250 \text{particles}$
	00 45 11
>	$38 \mu m_{(c)} = 15 \text{particles}$
	70 0 11 1
>	$70 \mu m_{(c)} = 3 particle$
0	
SF	AE AS4059 REV E
1 6A	V6B/5C/5D/4E/2F
0,	100,00,00,100

The information reproduced on this page is a brief extract from SAE AS4059 Rev.E, revised in May 2005. For further details and explanations refer to the full Standard.

SAE AS4059 - REV. F

It can be made a differential measurement (Table 1) or a cumulative measurement (Table 2)

Table 1 - Class for differential measurement

Class	Dimension of contaminant Maximum Contamination Limits per 100 ml (3						
	5-15 µm	15-25 µm	25-50 µm	50-100 µm	>100 µm	(1)	
	6-14 μm _(c)	14-21 µm _(c)	21-38 µm _(c)	38-70 μm _(c)	>70 µm _(c)	(2)	
00	125	22	4	1	0		
0	250	44	8	2	0	-	
1	500	89	16	3	1	-	
2	1 000	178	32	6	1	-	
3	2 000	356	63	11	2	-	
4	4 000	712	126	22	4		
5	8 000	1 425	253	45	8	-	
6	16 000	2 850	506	90	16	-	
7	32 000	5 700	1 012	180	32	-	
8	64 000	11 400	2 025	360	64	-	
9	128 000	22 800	4 050	720	128	_	
10	256 000	45 600	8 100	1 440	256	_	
11	512 000	91 200	16 200	2 880	512	_	
12	1 024 000	182 400	32 400	5 760	1 024	_	

6 - 14 μm _(c)	=15	000 particles
14 - 21 µm _(c)	= 2	200 particles
21 - 38 µm _(c)	=	200 particles
38 - 70 µm _(c)	=	35 particles
> 70 µm _(c)	=	3 particles
SAE AS4059	rev f	- Class 6

Size range, microscope particle counts, based on longest dimension as measured per AS598 or ISO 4407.
 Size range, APC calibrated per ISO 11171 or an optical or electron microscope with image analysis software, based on projected area equivalent diameter.
 Contamination classes and particle count limits are identical to NAS 1638.

Table 2 - Class for cumulative measurement									
Class		Dimension of contaminant Maximum Contamination Limits per 100 ml							
	>1 µm	>5 µm	>15 µm	>25 µm	>50 µm	>100 µm (1)			
	>4 µm _(c)	>6 µm _(c)	$>14 \ \mu m_{(c)}$	$>21 \ \mu m_{(c)}$	>38 µm _(c)	>70 µm _(c) (2)			
000	195	76	14	3	1	0			
00	390	152	27	5	1	0			
0	780	304	54	10	2	0			
1	1 560	609	109	20	4	1			
2	3 120	1 217	217	39	7	1			
3	6 250	2 432	432	76	13	2			
4	12 500	4 864	864	152	26	4			
5	25 000	9 731	1 731	306	53	8			
6	50 000	19 462	3 462	612	106	16			
7	100 000	38 924	6 924	1 224	212	32			
8	200 000	77 849	13 849	2 449	424	64			
9	400 000	155 698	27 698	4 898	848	128			
10	800 000	311 396	55 396	9 796	1 696	256			
11	1 600 000	622 792	110 792	19 592	3 392	512			
12	3 200 000	1 245 584	221 584	39 184	6 784	1 024			

> $4 \,\mu m_{(c)} = 45\,000$ particles

	F (0)		
> 6	6 μm _(c) = 1	5 000 particles	
> 14	$\mu m_{(c)} = $	1 500 particles	
> 21	$\mu m_{(c)} =$	250 particles	
> 38	3 μm _(c) =	15 particles	
) µm _(c) =	3 particle	
SAE /	AS4059 RE Class 6 6/	EV F /6/5/5/4/2	

* cumulative particle count

(1) Size range, optical microscope, based on longest dimension as measured per AS598 or ISO 4407.

(2) Size range, APC calibrated per ISO 11171 or an optical or electron microscope with image analysis software, based on projected area equivalent diameter.

- CLASSES OF CONTAMINATION ACCORDING TO NAS 1638 (January 1964)

The NAS system was originally developed in 1964 to define contamination classes for the contamination contained within aircraft components.

The application of this standard was extended to industrial hydraulic systems simply because nothing else existed at the time.

The coding system defines the maximum numbers permitted of 100 ml volume at various size intervals (differential counts) rather than using cumulative counts as in ISO 4406. Although there is no guidance given in the standard on how to quote the levels, most industrial users quote a single code which is the highest recorded in all sizes and this convention is used on MP Filtri APC's.

The contamination classes are defined by a number (from 00 to 12) which indicates the maximum number of particles per 100 ml, counted on a differential basis, in a given size bracket.

Size Range Classes (in microns)

	Maximum Contamination Limits per 100 ml							
Class	5-15 15-25 25-50 50-100 >100							
00	125	22	4	1	0			
0	250	44	8	2	0			
1	500	89	16	3	1			
2	1 000	178	32	6	1			
3	2 000	356	63	11	2			
4	4 000	712	126	22	4			
5	8 000	1 425	253	45	8			
6	16 000	2 850	506	90	16			
7	32 000	5 700	1 012	180	32			
8	64 000	11 400	2 025	360	64			
9	128 000	22 800	4 050	720	128			
10	256 000	45 600	8 100	1 440	256			
11	512 000	91 200	16 200	2 880	512			
12	1 024 000	182 400	32 400	5 760	1 024			

5 - 15 µm = 42 000 particles $15 - 25 \,\mu m = 2\,200 \,\mu m$ $25 - 50 \,\mu m = 150 \,particles$ 50 - 100 µm⊨ 18 particles > 100 µm 3 particles

Class NAS 8

- CUMULATIVE DISTRIBUTION OF THE PARTICLES SIZE - ISO 4407

The level of contamination is defined by counting the number of particles collected by a laboratory membrane per unit of fluid volume. The measurement is done by a microscope. The membrane must be cleaned, dried and desiccated, with fluid and conditions defined by the Standard. The fluid volume is filtered through the membrane, using a suitable suction system.


The level of contamination is identified by dividing the membrane into a predefined number of areas and by counting the contaminant particles using a suitable laboratory microscope.



Example figure 1 and 2	
ISO 4406	
SAE AS4059E Table 1	
NAS 1638	
SAE AS4059E Table 2	

1 graduation = 10µm

COMPARISON PHOTOGRAPH'S



Class 11

Class 12A/11B/11C

- CLEANLINESS CODE COMPARISON

Although ISO 4406 standard is being used extensively within the hydraulics industry other standards are occasionally required and a comparison may be requested. The table below gives a very general comparison but often no direct comparison is possible due to the different classes and sizes involved.

ISO 4406	SAE AS4059 Table 2	SAE AS4059 Table 1	NAS 1638
> 4 μm _(c) 6 μm _(c) 14 μm _(c)	> 4 μm _(c) 6 μm _(c) 14 μm _(c)	4-6 6-14 14-21 21-38 38-70 >70	5-15 15-25 25-50 50-100 >100
23 / 21 / 18	13A / 12B / 12C	12	12
22 / 20 / 17	12A / 11B / 11C	11	11
21 / 19 / 16	11A / 10B / 10C	10	10
20 / 18 / 15	10A / 9B / 9B	9	9
19 / 17 / 14	9A / 8B / 8C	8	8
18 / 16 / 13	8A / 7B / 7C	7	7
17 / 15 / 12	7A / 6B / 6C	6	6
16 / 14 / 11	6A / 5B / 5C	5	5
15 / 13 / 10	5A / 4B / 4C	4	4
14 / 12 / 09	4A / 3B / 3C	3	3

(5) RECOMMENDED CONTAMINATION CLASSES

The table below, gives a selection of maximum contamination levels that are typically issued by component manufacturer.

These relate to the use of the correct viscosity mineral fluid. An even cleaner level may be needed if the operation

is severe, such as high frequency fluctuations in loading, high temperature or high failure risk.

Piston pumps						
with fixed flow rate	•					
Piston pumps			•			
with variable flow rate			•			
Vane pumps						
with fixed flow rate		•				
Vane pumps			_			
with variable flow			•			
Engines	•					
Hydraulic cylinders	•					
Actuators					•	
Test benches						•
Check valve	•					
Directional valves	•					
Flow regulating valves	•					
Proportional valves				•		
Servo-valves					•	
Flat bearings			•			
Ball bearings				•		
ISO 4406 CODE	20/18/15	19/17/14	18/16/13	17/15/12	16/14/11	15/13/10
Recommended	B _{20(c)}	B _{15(c)}	B _{10(c)}	B _{7(c)}	β _{7(C)}	B _{5(C)}
filtration $B_{\rm X}(c) \ge 1.000$	>1000	>1000	>1000	>1000	>1000	>1000

For other comparison photographs for contamination classes see the "Fluid Condition and Filtration Handbook".

16

Fia. 1

Class 5

Class 6A/5B/5C


6 WATER IN HYDRAULIC AND LUBRICATING FLUIDS

Water Content

In mineral oils and non aqueous resistant fluids water is undesirable. Mineral oil usually has a water content of 50-300 ppm (@40°C) which it can support without adverse consequences.

Once the water content exceeds about 300 ppm the oil starts to appear hazy. Above this level there is a danger of free water accumulating in the system in areas of low flow. This can lead to corrosion and accelerated wear.

Similarly, fire resistant fluids have a natural water which may be different to mineral oil.

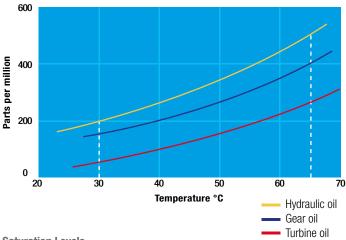


Saturation Levels

Since the effects of free (also emulsified) water is more harmful than those of dissolved water, water levels should remain well below the saturation point.

However, even water in solution can cause damage and therefore every reasonable effort should be made to keep saturation levels as low as possible. There is no such thing as too little water. As a guideline, we recommend maintaining saturation levels below 50% in all equipment.

TYPICAL WATER SATURATION LEVEL FOR NEW OILS Examples:

Hydraulic oil @ 30° C = 200 ppm = 100% saturation Hydraulic oil @ 65° C = 500 ppm = 100% saturation

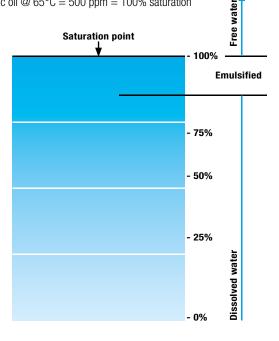

W - Water and Temperature Sensing

"W" option, in MP Filtri Contamination Monitoring Products, indicates water content as a percentage of saturation and oil temperature in degrees centigrade. 100% RH corresponds to the point at which free water can exist in the fluid. i.e. the fluid is no longer able to hold the water in a dissolved solution.

The sensor can help provide early indication of costly failure due to free water, including but not exclusive to corrosion, metal surface fatigue e.g. bearing failure, reduced lubrication & load carrying characteristics.

Different oils have different saturation levels and therefore RH (relative humidity) % is the best and most practical measurement.

Water absorber

Water is present everywhere, during storage, handling and servicing.

MP Filtri filter elements feature an absorbent media which protects hydraulic systems from both particulate and water contamination.


MP Filtri's filter element technology is available with inorganic microfiber media with a filtration rating 25 µm (therefore identified with media designation WA025, providing absolute filtration of solid particles to $B_{\rm X(C)} = 1000$).

Absorbent media is made by water absorbent fibres which increase in size during the absorption process. Free water is thus bonded to the filter media and completely removed from the system (it cannot even be squeezed out).



Fabric that absorbs water

The Filter Media has absorbed water

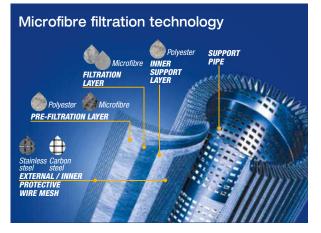

By removing water from your fluid power system, you can prevent such key problems as:

- corrosion (metal etching)
- loss of lubricant power
- accelerated abrasive wear in hydraulic components
- valve-locking
- bearing fatigue
- viscosity variance (reduction in lubricating properties)
- additive precipitation and oil oxidation
- increase in acidity level
- increased electrical conductivity (loss of dielectric strength)
- slow/weak response of control systems

Product availability - UFM Series: UFM 041 - UFM 051 - UFM 091 - UFM 181 - UFM 919


UFM 181 GENERAL INFORMATION

Description

Mobile filtration units

UFM 181 mobile filtration units suitable for filling and refilling of filtered hydraulic fluids and lubrication tanks.

The filter unit connected to off-line to the tank, can be used as a support to the filtration plant on start-up for fast flushing action, either as additional filtration systems with a high incidence of contamination. Recommended maximum tank volume of 1800/2700 L.

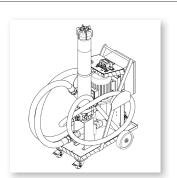

> Features & Benefits

- Compact size
- High flow
- Continue Operation Pressure 10 bar
- Easy to use
- Easy maintenance
- Reliable
- Absolute filtrationIn-line Contamination Monitor

Available in two configurations:

- configuration with start / stop automatic motor

- cut-out from differential pressure indicator - electrical / visual

- configuration with start / stop phase inverter automatic motor - cut-out from differential pressure indicator - electrical / visual - in-line Particle Counter ICM





Technical data

Protection Class Pump IP55 Screw pump **Electric Motor** Seal 4 kW 400/230V three phase 2-pole NBR Flow (I/min) Fluid Compatibility 180 l/min - 2900 r.p.m. Mineral Oil & Synthetic Oil - Water Glycol **Max. Operation Pressure Suction hose** lance 10 bar DN50 length 3000 mm DN/0D50 length 700 mm **Viscosity range Pressure hose** lance Min. operation 10 cSt DN38 length 3000 mm DN/0D42 length 700 mm Max. operation 800 cSt Weight Max. only for cold start 2000 cSt 109 kg **Suction Filter** Type Y filtration 800 µm Equipment - Differential Clogging indicator - Electrical / Visual (setting 3.0 bar $\pm 10\%$) **Filtration Rating** - Differential Clogging indicator - Electrical / Visual - with ICM 2.0 1, 3, 6, 10, 25 μ m β >1000 flow through the element Out/In (setting 3.0 bar ±10%) C E Standard Bypass valve ∆p set Rating 3.5 bar with bypass. The bypass can be blocked through the spigot

Fluid Temperature From -10° to +80 °C

Ambient Temperature From -20° to +45 °C



51)

UFM 181

Designation & Ordering code

MOBILE FILTRATION UNIT UFM 181										
Series	Configuration example:	UFM	181	Т	Α	3	0	2	0	P01
UFM										
Size										
181 180 l/min										
Electric motor										
T 400/230 V Three phase										
Seals										
A NBR										
Pressure gauges and Clogging indicators										
3 Manometer + Electrical/Visual Differential Cloggi	ng indicator									
Filter element										
0 Without element										
Filtration surface										
2 Higher										
Option										
0 No options										
1 ICM 2.0 particle counter										
Option										
P01 MP Filtri standard										
Pxx Customized										

Filtration element should be ordered separately

	FILTRATION SU	RFACE - HIGHER
Inorganic microfibre	Wire mesh element	
CU 400 6 A01 A N P01	CU 400 6 M25 A N P01	
CU 400 6 A03 A N P01	CU 400 6 M60 A N P01	
CU 400 6 A06 A N P01		
CU 400 6 A10 A N P01		
CU 400 6 A16 A N P01		
CU 400 6 A25 A N P01		


WATER REMOVAL - FILTRATION SURFACE 1 - HIGHER

Multi-Layer water absorber CU4006WA025ANP01

(52)

UFM 181

Dimensions

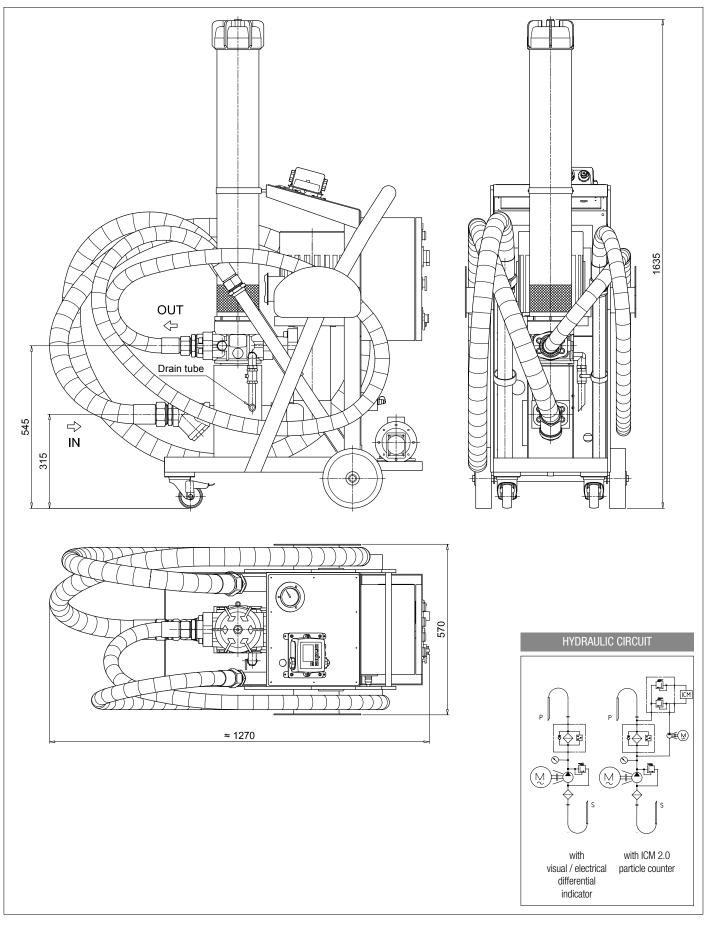



(53)